

GB INSTALLATION INSTRUCTION REAR RUBBER SPLASH GUARDS

E INSTRUCCIONES DE MONTAJE GUARDABARROS TRASEROS DE GOMA


F NOTICE DE MONTAGE BAVETTES GARDE-BOUE EN CAOUTCHOUC ARRIÈRE

Subject to alteration without notice
Reservadas modificaciones técnicas
Sous réserve de modifications techniques

Expert Fitment Required
Montaje sólo por el concesionario
Montage par spécialiste nécessaire


06-12-2001 K6858519

© DAIMLERCHRYSLER

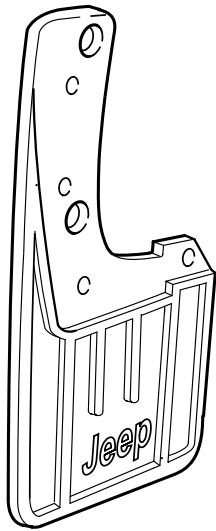


A

L

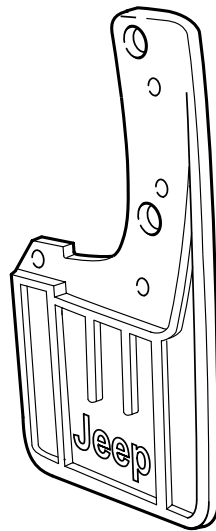


B

R

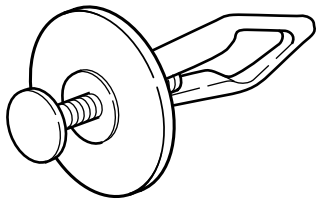


C

6x

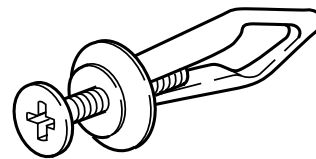



D

2x

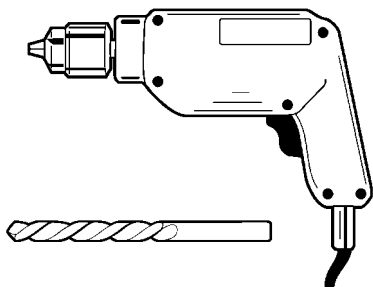


1/4"

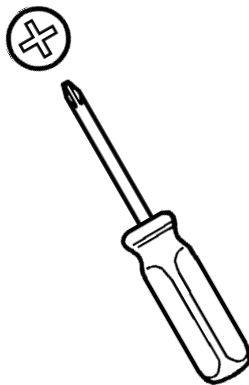

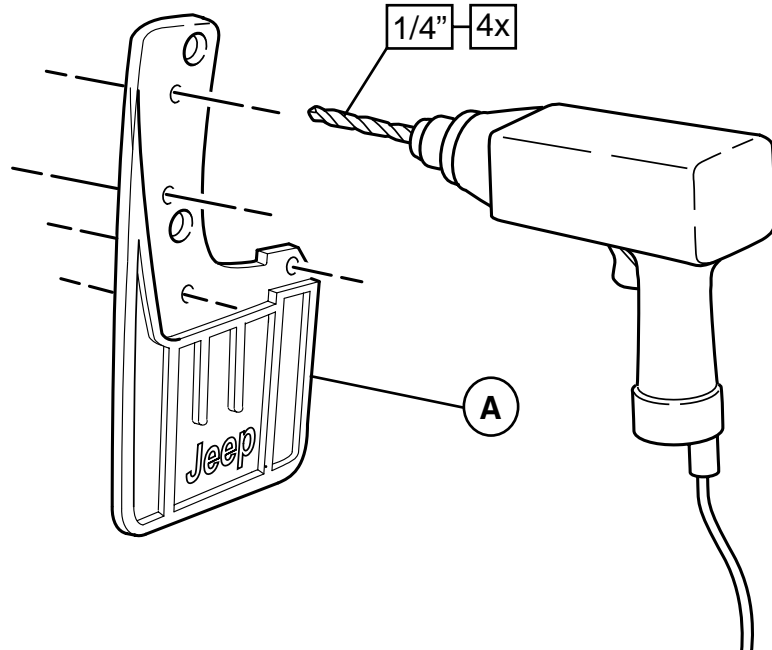


L/R

1

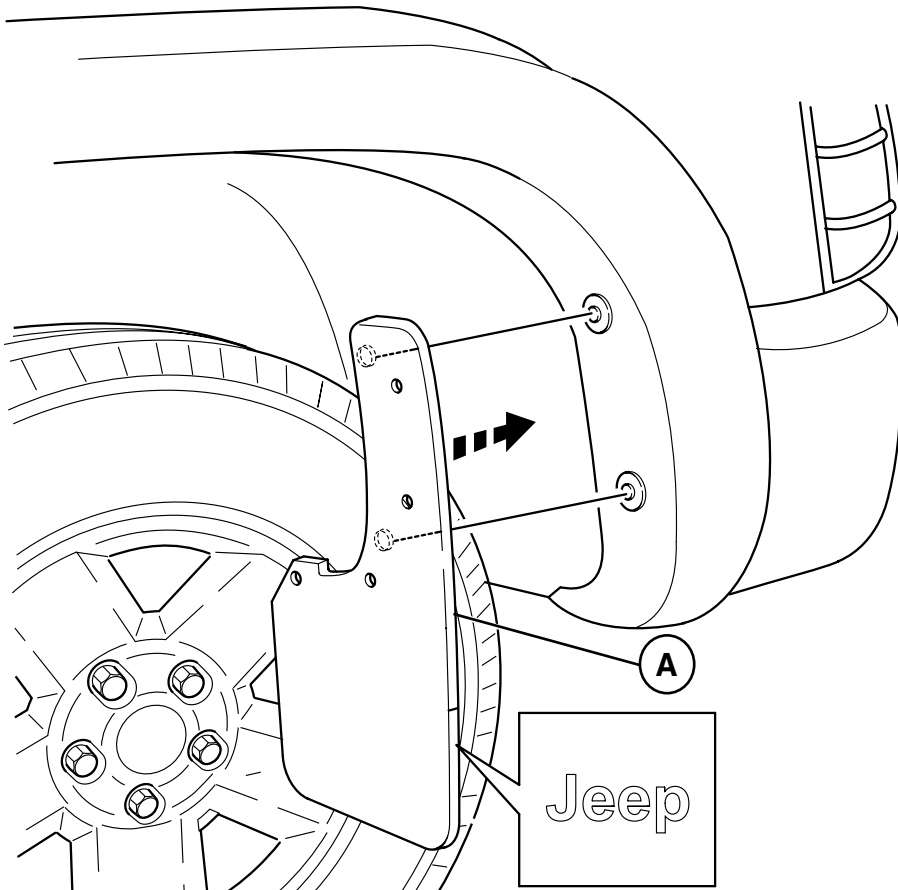


L/R

2

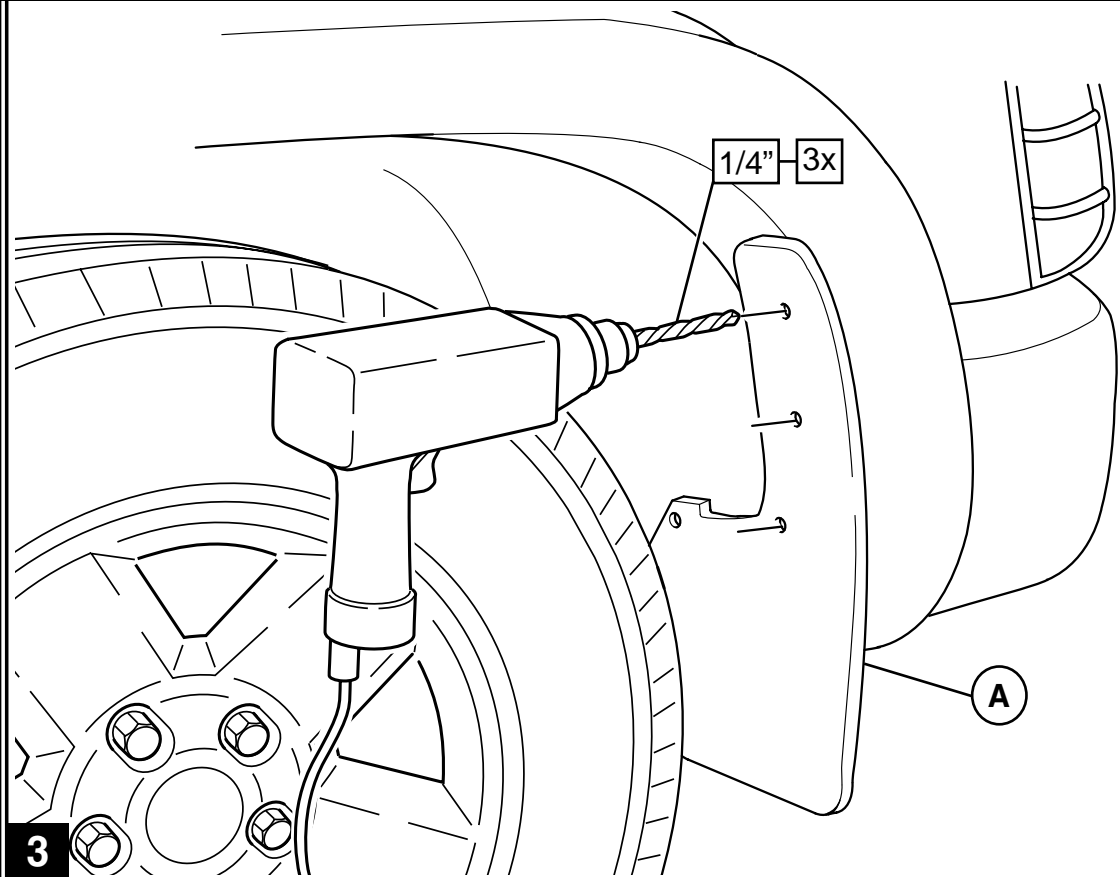


3

L/R

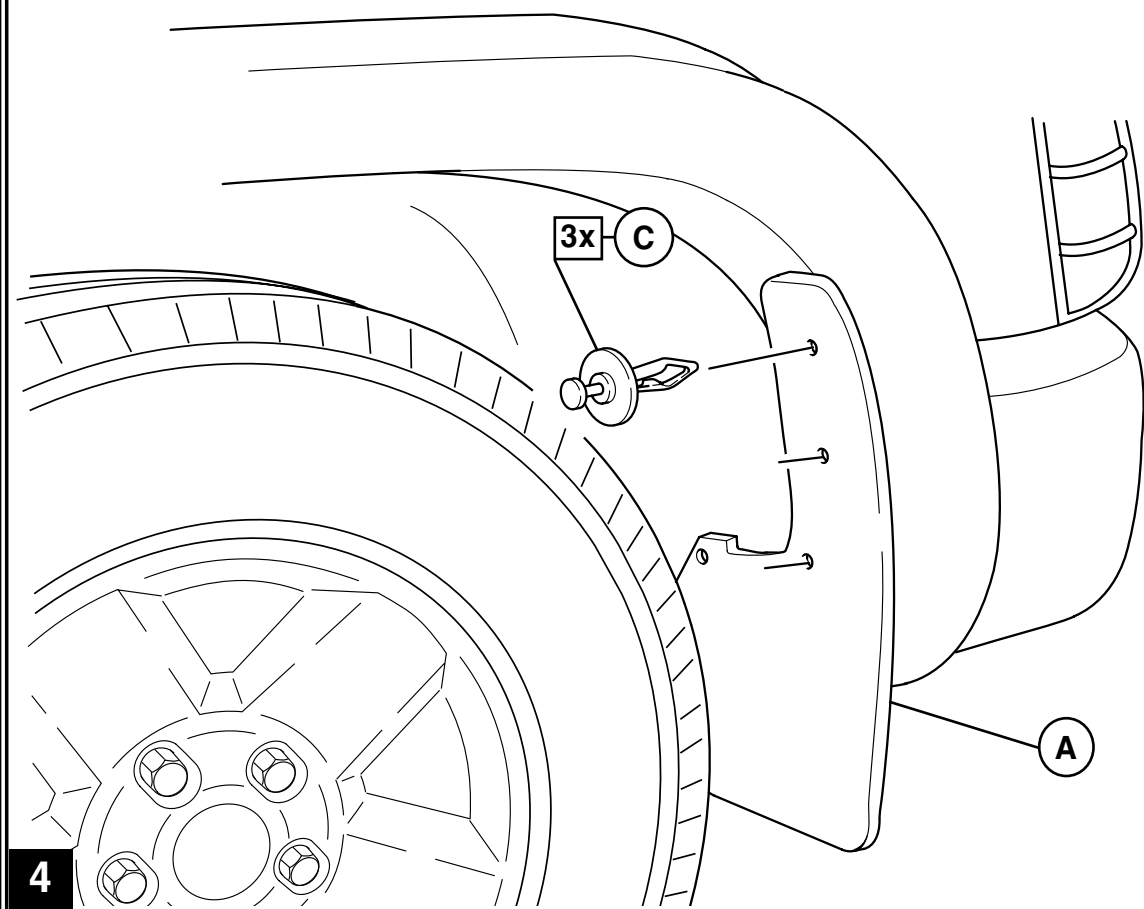


4

L/R

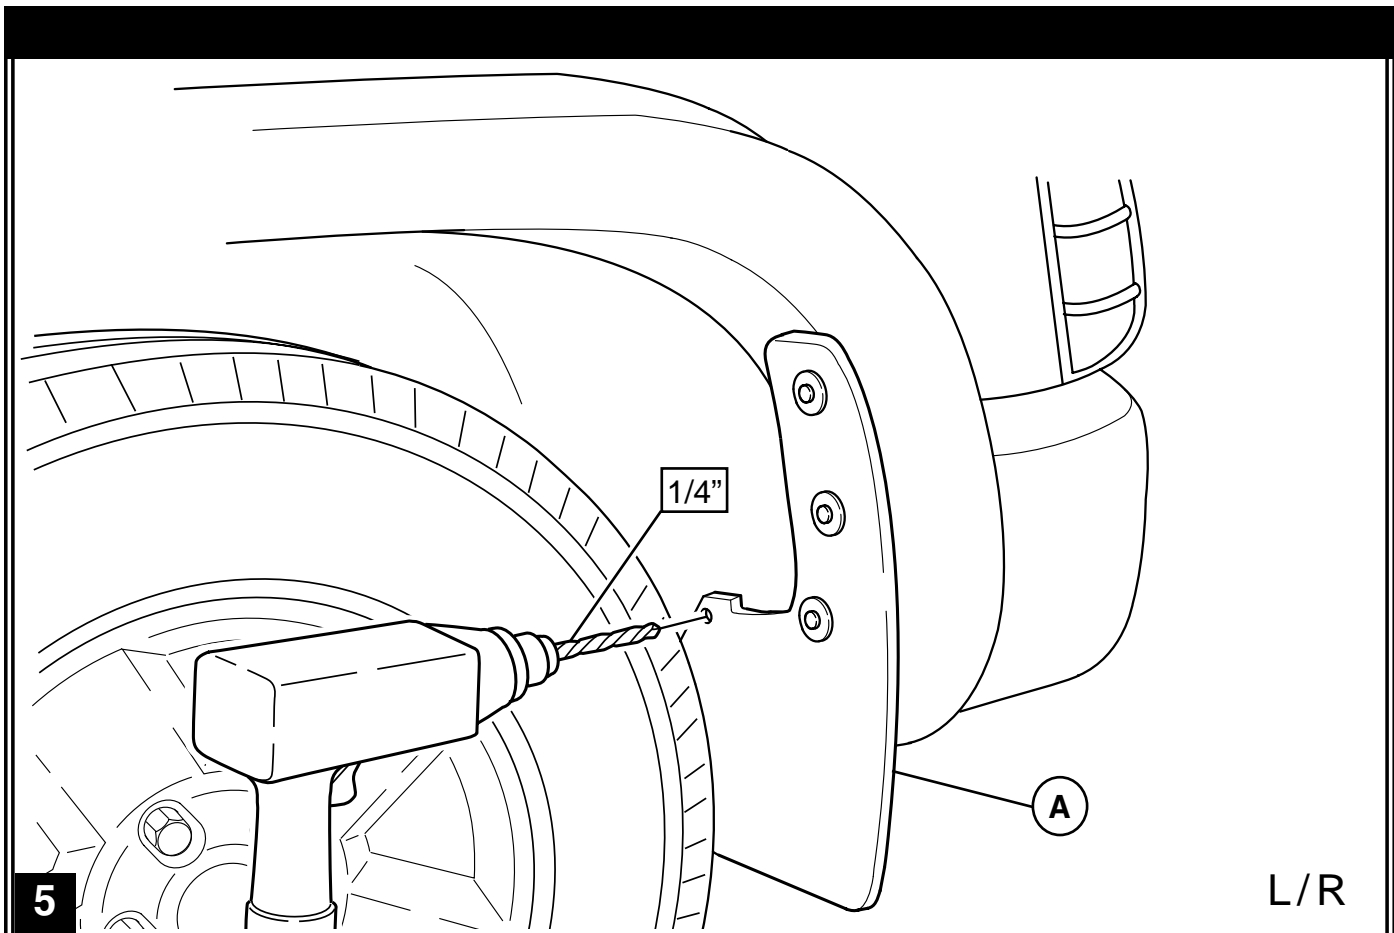

L/R

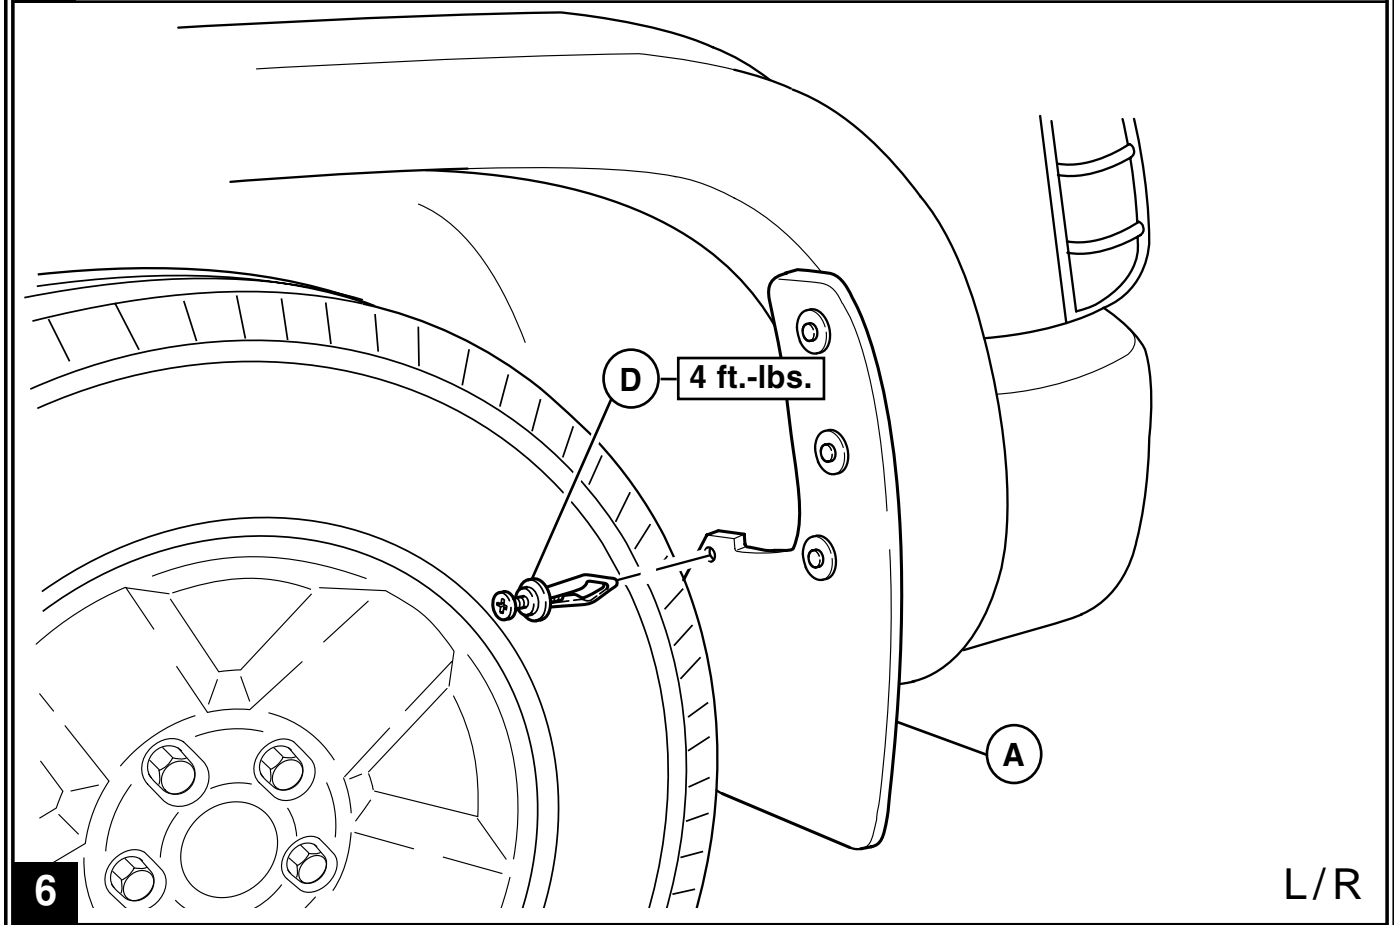

L/R